


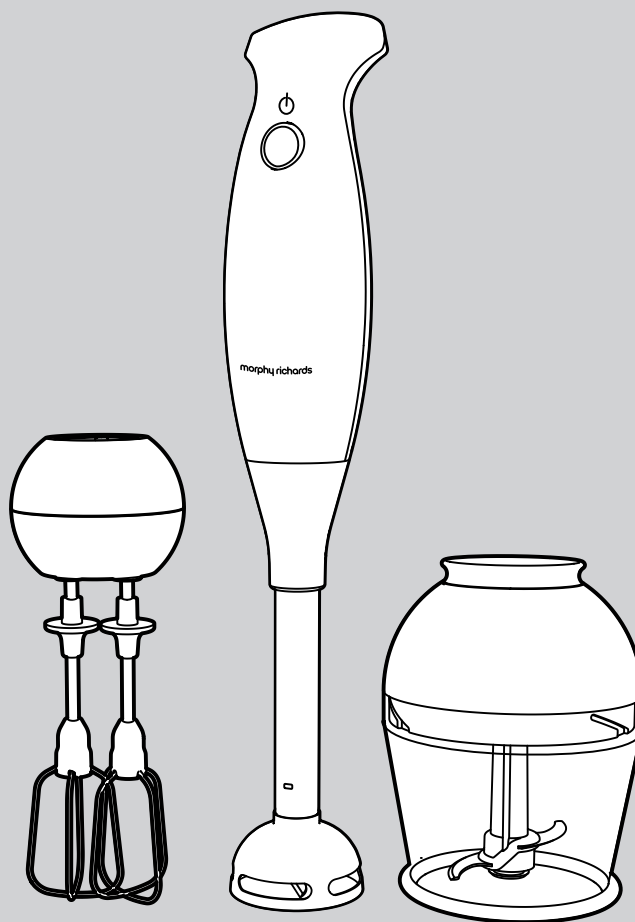 
FP48544 MUK Rev 1

morphy richards®



Accents Hand Blender Set

 Please read and keep these instructions for future use



48544

For competitions, product hints and tips
and more join us at



www.morphyrichards.co.uk/blog



www.facebook.com/morphyrichardsuk

 


www.twitter.com/loveyourmorphy

www.morphyrichards.com

* Register online for your 2 year guarantee. See the back of this instruction book for details. (UK and Ireland customers only)

Product overview

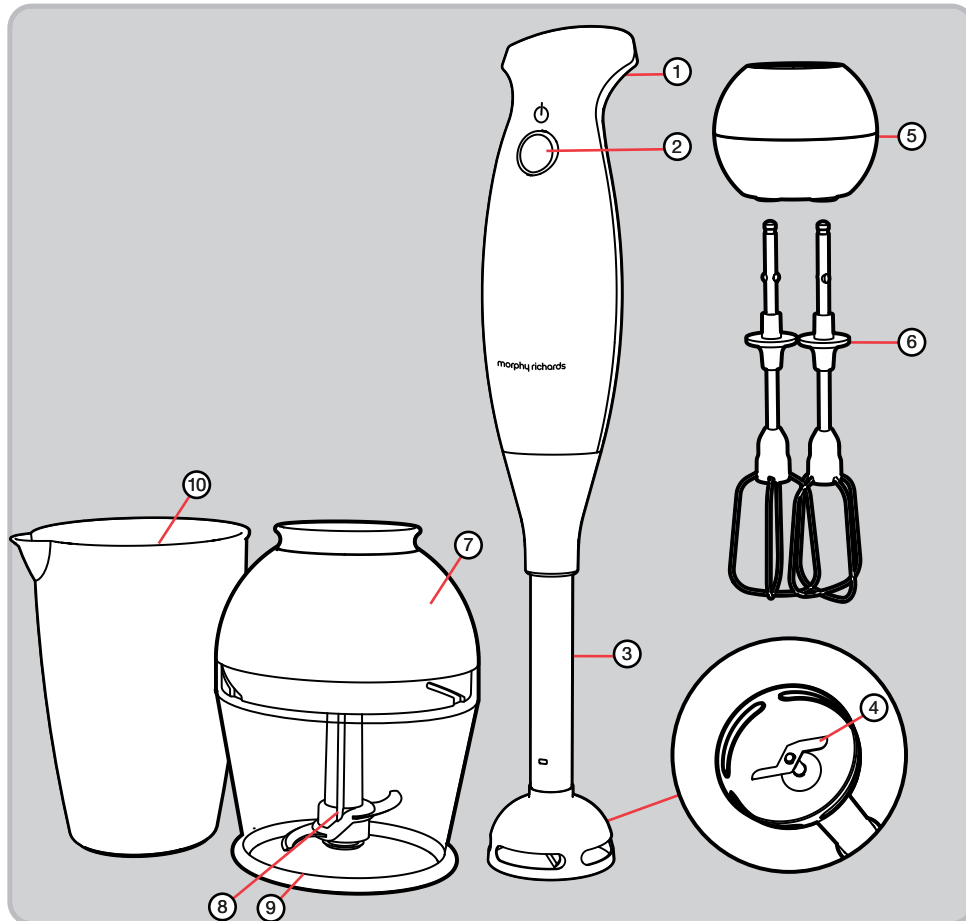

Features

- (1) Main Unit
- (2) On/Speed Button
- (3) Blending Leg
- (4) Blade
- (5) Whisk Gearbox
- (6) Beaters
- (7) Chopping Bowl Lid
- (8) Chopping Blade
- (9) Chopping Bowl
- (10) Beaker

Introduction

 
Thank you for your recent purchase of this Morphy Richards Hand Blender Set.

The hand blender set comes with a number of attachments and a 'quick twist' connection mechanism for safety.


Please read the instructions for information on how to use each attachment thoroughly before use.

Remember to visit www.morphyrichards.co.uk to register your product's two year guarantee.



Using your hand blender

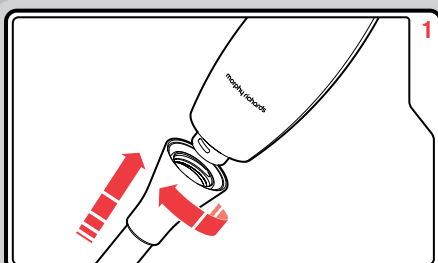


 
Insert the Blending Leg (3) into the Main Unit (1) and twist to secure into place.

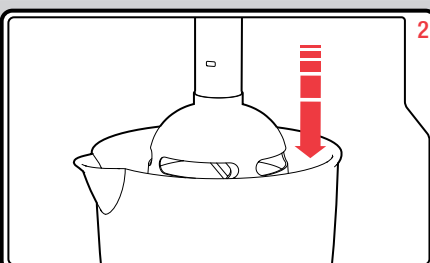

  Place the Blending Leg into the food to be blended. We recommend using the Beaker (10) for the best results.

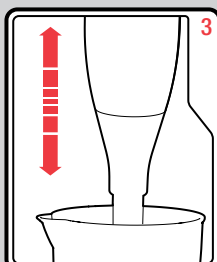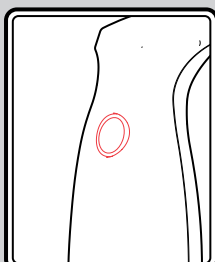

  Hold the Beaker steady with your other hand and press and hold the On/Speed Button (2) to start. Move the Blade (4) through the food using an up and down motion. Release the On/Speed Button to stop **BEFORE** removing from the food.

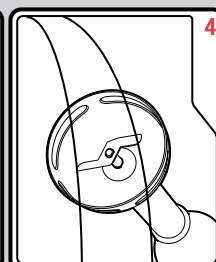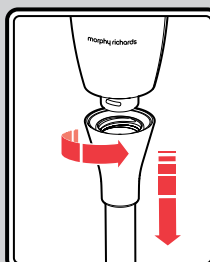

Unplug from the mains before twisting the Blending Leg (3) to unlock from the Main Unit. To clean the Blending Leg, rinse under running water and clean with a damp cloth.

Speed Button

- Your Hand Blender has 2 speed settings which can both be used when blending food.

 
Press the On/Speed Button (2) lightly to use the hand blender on the slower speed setting.

Press the On/Speed Button fully to use the hand blender on the faster speed setting.


Usage

- WARNING:** Your Hand Blender Set is designed for intermittent use. Do not use continuously for more than 1 minute. Allow to cool down for a minimum of 5 minutes before further use.
- Do not use continuously for more than 10 seconds when lifted out of food.


Using the Chopping Bowl

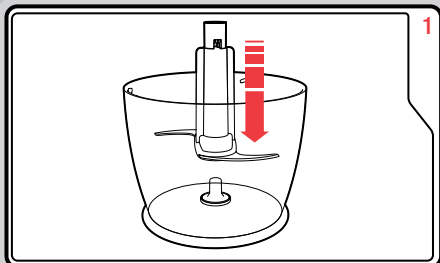

 
CAREFULLY insert the Chopping Blade (8) into the Chopping Bowl (9).

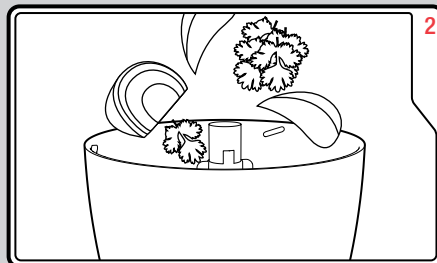

 
Place the food you wish to chop into the Chopping Bowl. (Please refer to the maximum quantities table on page 6)

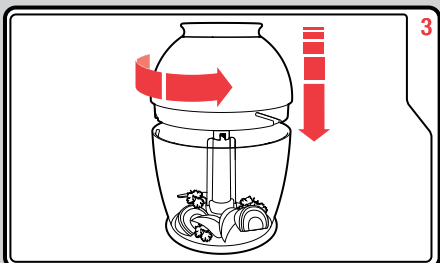

 
Place the Chopping Bowl Lid (7) on the Chopping Bowl. Twist to secure into place.

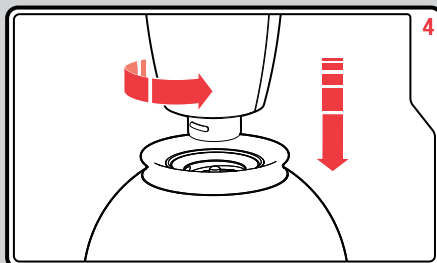

 
Attach the Main Unit (1) to the Chopping Bowl Lid, twist to lock secure place.

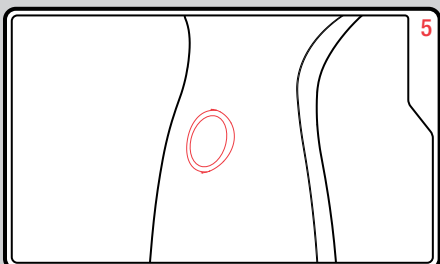

 
Press and hold the On/Speed Button (2) to start. Use on the faster speed setting. Release the button to stop **BEFORE** detaching the Main Unit from the Lid.

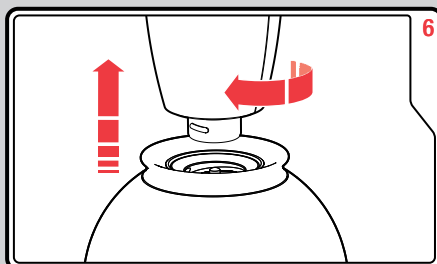

 Unplug from the mains before twisting the Main Unit to detach from the Lid.

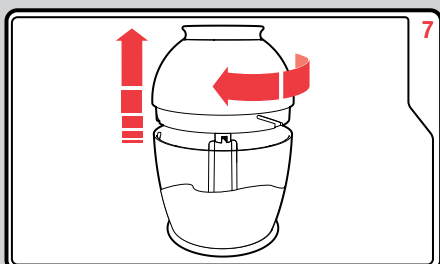


 Remove the Chopping Bowl Lid from the Chopping Bowl.


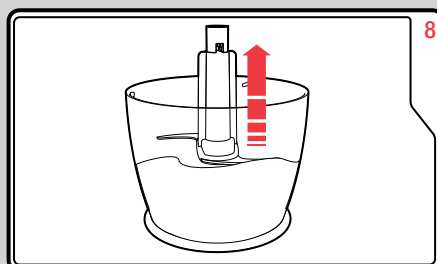


CAREFULLY remove the Chopping Blade before emptying the food from the Chopping Bowl.

 
Using the Whisk

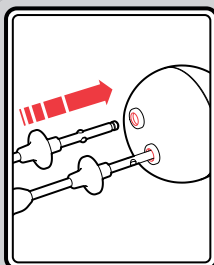

  
Insert the Beaters (6) into the Whisk Gearbox (5). Attach the whisk onto the Main Unit (1).

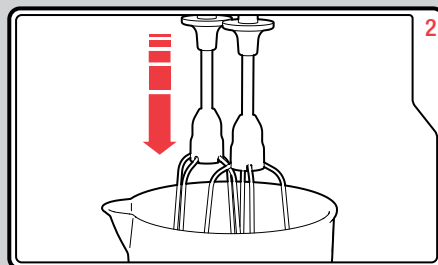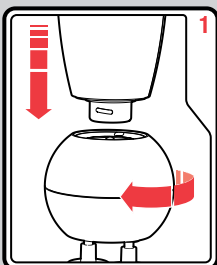

Place the Beaters into the ingredients.

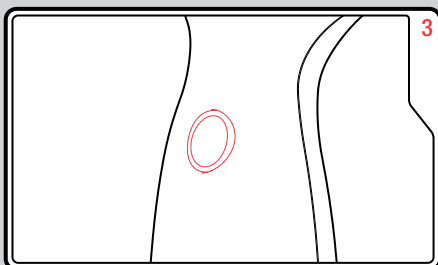 

 Hold the container steady with your other hand and press and hold the On/Speed Button (2) to start. Use on the slower speed setting only. Release the button to stop **BEFORE** removing the Beaters from the food.

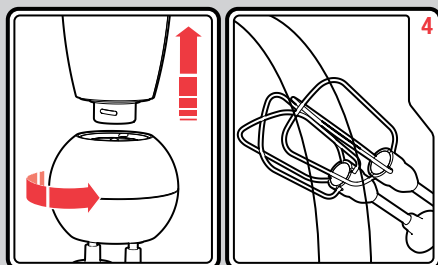

Unplug from the mains before twisting the Whisk Gearbox to unlock from the Main Unit. Pull the Beaters from the Whisk Gearbox for cleaning.

Blending in a saucepan

1. Remove the saucepan from the heat.
 2. To avoid excessive splashing, place the Blending Leg (3) into the food before switching the hand blender on.
 3. Hold the pan steady with your other hand and press the On/Speed Button (2).
 4. Move the Blade (4) through the food using a up and down motion.
 5. Allow the Blade to stop moving before removing from the pan.
- **WARNING:** Lifting the Blade out of the food while running could splash hot liquid. Extra care should be taken when using the hand blender in this manner.
 - Do not insert the hand blender into the food past the join between the Main Unit (1) and the Blending Leg (3).
 - Ensure the power cable doesn't touch any hot surfaces (including the side of the pan.)

Suitable foods for blending

Blending Leg (3)

- The Blending Leg is designed for pureeing soft foods for use in soups and baby food.
- The Blending Leg is not suitable for grinding hard items such as coffee beans, ice, nuts, meat or hard vegetables (raw potatoes, raw carrots etc).

Beaters (6)

- The Beaters are ideal for whipping cream, eggs and other soft foods. The beaters should only be used on the slower speed setting.
- They are not suitable for stiffer mixtures such as cake batter.

Chopping Bowl (9)

- The Chopper is suitable for chopping nuts, herbs, boiled eggs and dried bread.
- The Chopper is not suitable for grinding coffee beans, ice, or hard vegetables (raw potatoes, raw carrots etc).

Maximum quantities for use in the Chopping Bowl (9)

- The amounts listed below should be used as a guide. The Chopping Bowl (9) should not be filled more than half full.

Ingredients	Maximum Quantity	Time
Onions	• 200g	• 3-8 seconds
Carrots	• 100g	• 5-15 seconds
Basil	• 50g	• 7-12 seconds
Meat (fat free)	• 100g	• 7-13 seconds
Peanuts	• 100g	• 5-15 seconds

Top tips

- When blending foods with strong colour (eg. cooked carrots), the plastic parts of the appliance may become discoloured. Wipe with cooking oil to clean any discoloured parts.
- When blending using the Blending Leg (3), start the process by plunging the blender into the ingredients. This will ensure all the ingredients are pulled into the blade to be processed. Continue blending using a up and down motion until the mixture is to the desired consistency.
- Do not lift the Blending Leg out of the mixture completely when running, as splashing may occur.
- For best results use the supplied Beaker (10) when using the Blending Leg.

Care and cleaning

- WARNING:** Always unplug the appliance from the mains socket before cleaning and maintenance.
- WARNING:** Handle the blades with care as they are sharp.
- Wash the Blending Leg (3) Beaters (6), Chopping Blade (8), Chopping Bowl (9), and Beaker (10) thoroughly in hot soapy water. Dry completely before reusing.
- Clean the Main Unit (1), Whisk Gearbox (5) and the Chopping Bowl Lid (7) with a damp cloth and dry all the parts thoroughly.
- WARNING:** Never immerse the Main Unit, Whisk Gearbox or Lid in water or any other liquid.
- No parts are dishwasher safe.

Contact us

Helpline

If you are having a problem with your appliance, please call our Helpline, as we are more likely to be able to help than the store you purchased the item from.

Please have the product name, model number and serial number to hand when you call to help us deal with your enquiry quicker.

UK Helpline: 0844 871 0960

IRE Helpline: 1800 409 119

Spares: 0844 873 0726

Talk To Us

If you have any questions or comments, or want some great tips or recipe ideas to help you get the most out of your products, join us online:

Blog: www.morphyrichards.co.uk/blog

Facebook: www.facebook.com/morphyrichardsuk

Twitter: www.twitter.com/loveyourmorphy

Website: www.morphyrichards.com

Health and Safety

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

WARNING: Danger to the person!

IMPORTANT: Damage to the appliance!

In addition, we offer the following safety advice.

Location

- This appliance is intended to be used in household and similar applications such as:
farm houses;
by clients in hotels, motels and other residential type environments;
bed and breakfast type environments.
It is not suitable for use in staff kitchen areas in shops, offices and other working environments.
- Do not use outdoors or in a bathroom.
- Always locate your appliance away from the edge of the worktop.
- Do not place a bowl when used with the appliance on a highly polished wooden surface as damage may occur to the surface.
- Do not place the appliance on or near a hot surface, such as a hot plate or radiant rings or near a naked flame.

Mains cable

- Do not let the mains cable hang over the edge of the worktop where a child could reach it.
- Do not let the lead run across an open space e.g. between a low socket and a table.
- Do not let the cable run across a cooker or other hot area which might damage the cable.
- The mains cable should reach from the socket to the base unit without straining the connections.
- The power cord cannot be replaced. Contact Morphy Richards for advice.

Personal safety

- Avoid touching moving parts. Keep hands, hair and clothing, and utensils away from the hand mixer attachment blades during operation, to prevent personal injury and/or damage to the appliance.
- **WARNING:** To protect against the risk of electric shock, NEVER immerse the appliance body in water or in any other liquid and always ensure the electrical connections are kept dry.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.
- Children should be supervised to ensure that they do not play with the appliance.
- Teach children to be aware of dangers in the kitchen, warn them of the dangers of reaching up to areas where they cannot see properly or should not be reaching.

Other safety considerations

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.
- Do not use the appliance for anything other than it's intended purpose.
- Unplug from the outlet when not in use, or when left unattended, and before assembling, disassembling or cleaning.

Product specific safety

- **WARNING:** The blender blades are very sharp. Handle with care when using and cleaning.
- **WARNING:** To protect against fire, electric shock and personal injury, do not immerse the cord, plug or mixer in water or other liquid.
- Do not clean the attachments under running water while they are in position.
- Make sure the blender is switched off before connecting to or disconnecting from the mains supply and when left unattended.

Electrical requirements

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

WARNING : The plug removed from the mains lead, if severed, must be destroyed, as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.

Should the fuse in the mains plug require changing, a 3 amp BS1362 fuse must be fitted.

FP48544 MUK Rev 1 04/12

Registering your 2 year guarantee

Your standard one year guarantee is extended for an additional 12 months when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 1 year. To validate your 2 year guarantee register with us online at www.morphyrichards.co.uk

Or call our customer registration line

UK 0844 871 0962

IRE 1800 409 119

N.B. Each qualifying product needs to be registered with Morphy Richards individually.

Please note that the 2 year guarantee is only available in the UK and Ireland. Please refer to the one year guarantee for more information.

Your 1 year guarantee

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 12 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 1 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 1 year guarantee, the appliance must have been used according to the instructions supplied. For example, crumb trays should have been emptied regularly.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
 - 2 The appliance has been used on a voltage supply other than that stamped on the products.
 - 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
 - 4 The appliance has been used for hire purposes or non domestic use.
 - 5 The appliance is second hand.
 - 6 Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion
 - 7 Plastic filters for all Morphy Richards kettles and coffee makers are not covered by the guarantee.
 - 8 Batteries and damage from leakage are not covered by the guarantee.
- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.



For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country

**IF YOU ARE HAVING A PROBLEM
WITH ONE OF OUR PRODUCTS, CALL
OUR HELPLINE:**

**UK: 0844 871 0960
EIRE: 1800 409 119
SPARES: 0844 873 0726**

morphy richards

The After Sales Division
Morphy Richards Ltd
Mexborough, South Yorkshire,
England, S64 8AJ

Helplines (office hours)
UK 0844 871 0960
Spare Parts 0844 873 0726
Republic of Ireland 1800 409 119
www.morphyrichards.com

